

J E T

JWS-34KX SINGLE SPINDLE MOULDER

708502KXM...230/50/1


708502KXT ...400/50/3

PARTS LIST

Walter Meier (Tool) AG
Täumperlistrasse 5
CH-8117 Fällanden
Switzerland
Phone +41 44 806 47 48
Fax +41 44 806 47 58
jetinfo.eu@waltermeier.com
www.jettools.com




Spindle Assembly

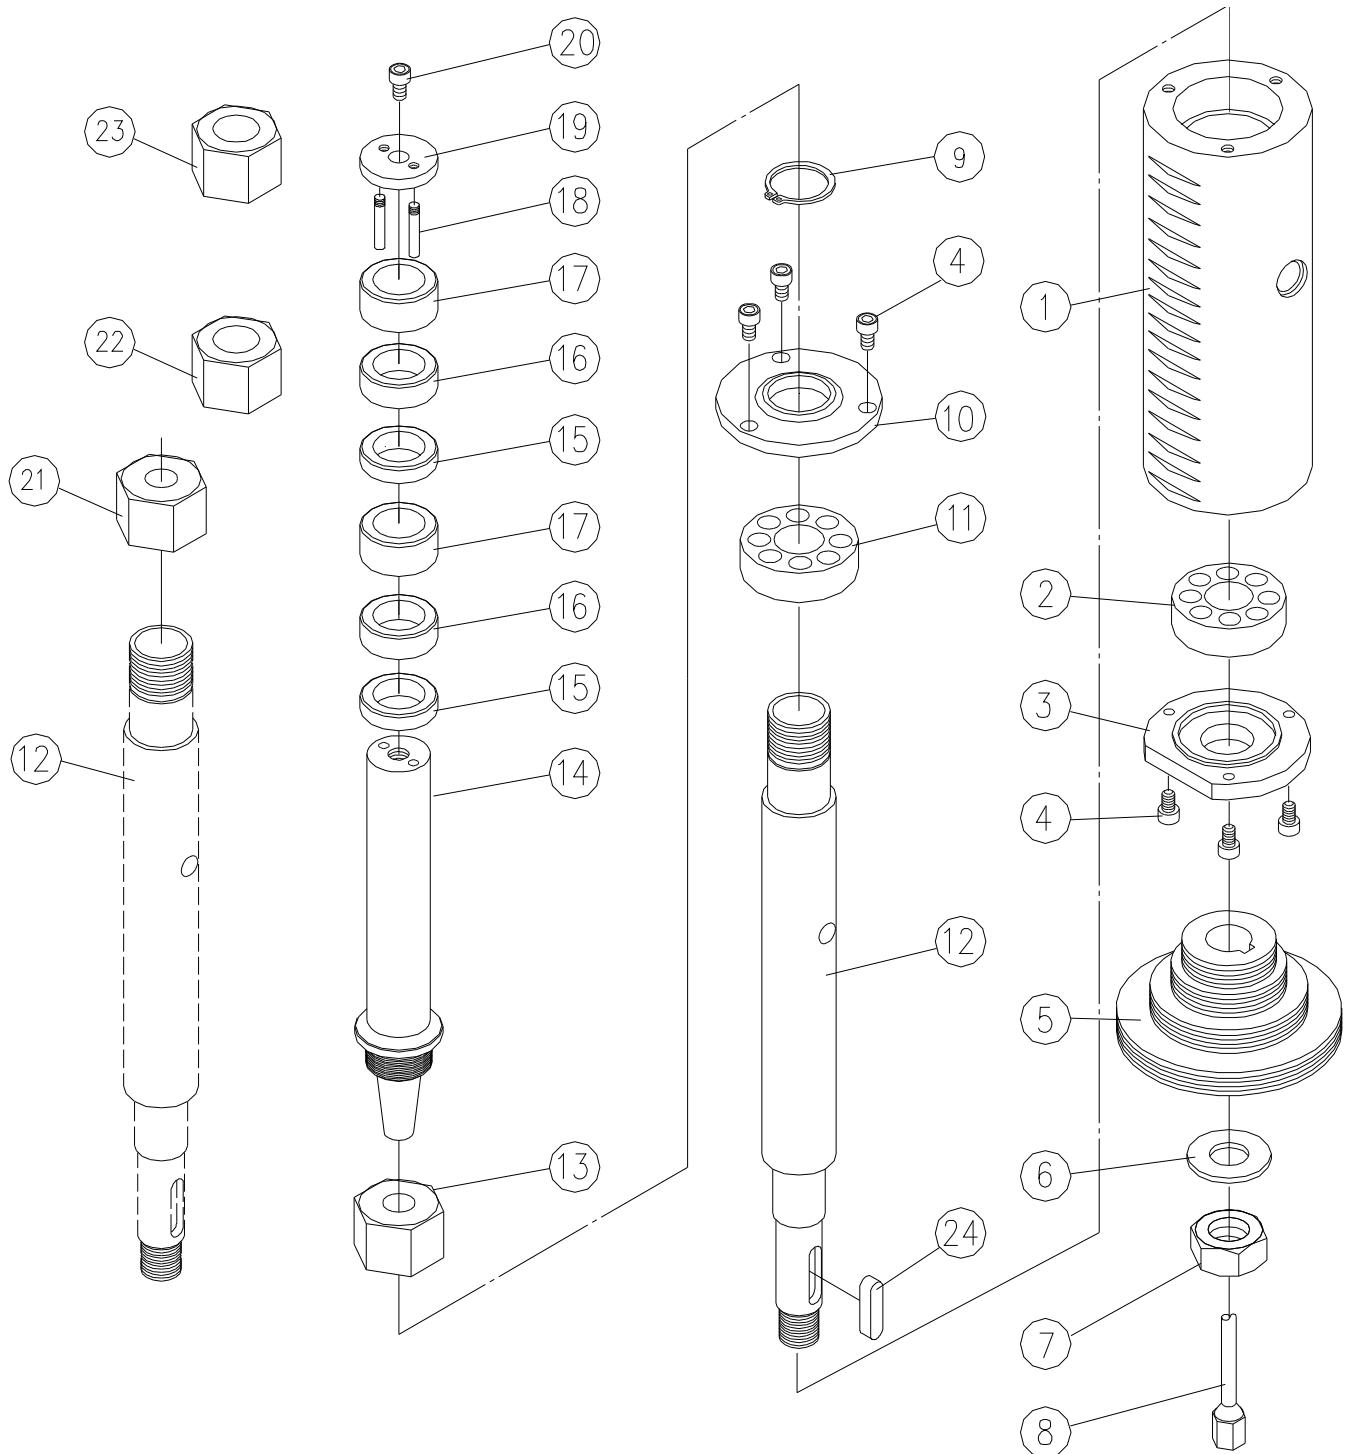

Spindle Assembly Parts List

Index	Part			
No.	No.	Description	Size	Qty.
1.....	JWS34-001E.....	Cartridge		1
2.....	BB6205-2NK.....	Ball Baring.....		1
3.....	JWS34-042.....	Lower Shaft Cover.....		1
4.....	JWS34-004E.....	Hex Socket Cap Screw.....	1/4"-20UNCx5/8	6
5.....	JWS34-005NE	Arbor Pulley	4 Speed.....	1
6.....	JWS34-045.....	Lock Washer	3/4"	1
7.....	JWS34-046.....	Hex Nut	3/4" -16UNF.....	1
8.....	JWS34-008NE	Drawbar		1
9.....	JWS34-200.....	C-Ring	STW-30.....	1
10.....	JWS34-199.....	Top Shaft Cover		1
11.....	BB6006-2NK.....	Ball Baring.....		1
12.....	JWS34-012NE	Shaft		1
13.....	JWS34-013E.....	Special Arbor Nut		1
14.....	JWS34-014E.....	Arbor	30mm.....	1
15.....	JWS34-015E.....	Collar	30mmx8mm	2
16.....	JWS34-016E.....	Collar	30mmx10mm	2
17.....	JWS34-017E.....	Collar	30mmx20mm	2
18.....	JWS34-018E.....	Pin		2
19.....	JWS34-019E.....	Washer		1
20.....	JWS34-011.....	Hex Socket Cap Screw.....	3/8"-16UNCx1"	1
21.....	JWS34-021E.....	Collet	12mm.....	1
22.....	JWS34-022E.....	Collet	8 mm.....	1
23.....	JWS34-023NE	Collet(England)	1/2"	1
24.....	JWS34-024NE	Key	7x7x30.....	1
25.....	JWS34-025.....	Collet(Optional)(not shown)	1/4"	1


Fence Assembly

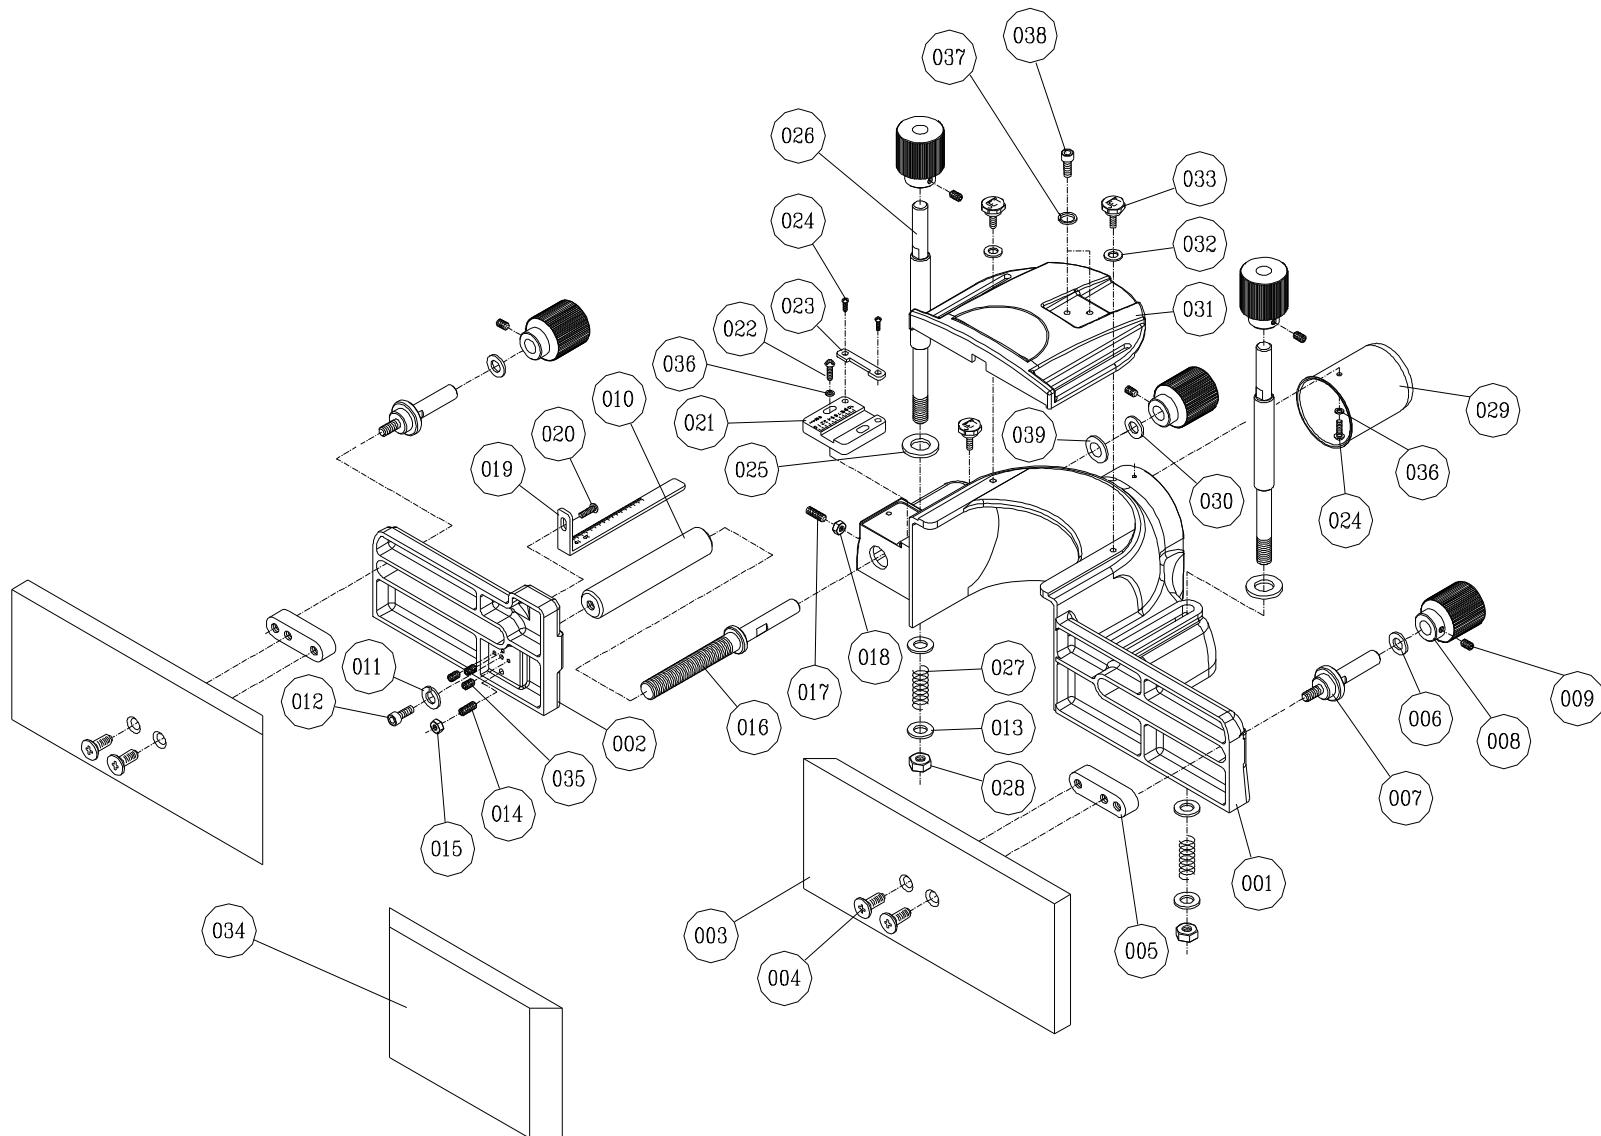

Fence Assembly Parts List

Index	Part No.	Description	Size	Qty.
01.....	JWS34-01E	Fence Body.....		1
02.....	JWS34-02E	Left Fence Plate.....		1
03.....	JWS34-03E	Wood Fence.....		2
04.....	JWS34-04E	CounterSunk Head Cap Screw.....	M10x1.5Px25L.....	4
05.....	JWS34-05E	Slide		2
06.....	JWS34-06E	Plastic Flat Washer		2
07.....	JWS34-07E	Leader		2
08.....	JWS34-08E	Knob		5
09.....	JWS34-09E	Set Screw	M6x1.0Px8L	5
10.....	JWS34-10E	Shaft		1
11.....	JWS34-11E	Lock Washer	M8.....	1
12.....	JWS34-12E	Hex Socket Cap Screw.....	M8x1.25Px16L.....	1
13.....	JWS34-13E	Flat Washer	• 13x• 25x2T.....	4
14.....	JWS34-14E	Set Screw	M6x1.0Px30L.....	1
15.....	JWS34-15E	Hex Nut.....	M6x1.0P	1
16.....	JWS34-16E	Adjustment Leader		1
17.....	JWS34-17E	Set Screw	M8x1.25Px30L.....	1
18.....	JWS34-18E	Hex Nut.....	M8x1.25P	1
19.....	JWS34-19E	Scale.....		1
20.....	JWS34-20E	Round Head Screw	M5x0.8Px10L.....	1
21.....	JWS34-21E	Scale Bracket.....		1
22.....	JWS34-22E	Round Head Screw	M5x0.8Px16L.....	2
23.....	JWS34-23E	Fixing Plate		1
24.....	JWS34-24E	Round Head Screw	M4x0.7Px8L	4
25.....	JWS34-25E	Flat Washer	• 14x• 32x2.5T.....	2
26.....	JWS34-26E	Fixing Load Assy.....		2
27.....	JWS34-27E	Spring		2
28.....	JWS34-28E	Nylon Nut.....	1/2" -12UNC	2
29.....	JWS34-29E	Dust Chute		1
30.....	JWS34-30E	Wave Washer		1
31.....	JWS34-31E	Safety Guard Holder.....		1
32.....	JWS34-032E	Flat Washer	• 6.5x• 19x2T.....	2
33.....	JWS34-33E	Knob		3
34.....	JWS34-34E	Wood Plate		1
35.....	JWS34-35E	Set Screw	M6x1.0P12L.....	3
36.....	JWS34-36E	Flat Washer	• 6x• 12x1T.....	4
37.....	TS-130205.....	Lock Washer	1/4"	2
38.....	TS-1503041.....	Hex Socket Cap Screw.....	M6 x 16L	2
39.....	JWS34-39E	Flat Washer	• 13x28x3T	1

Base Assembly

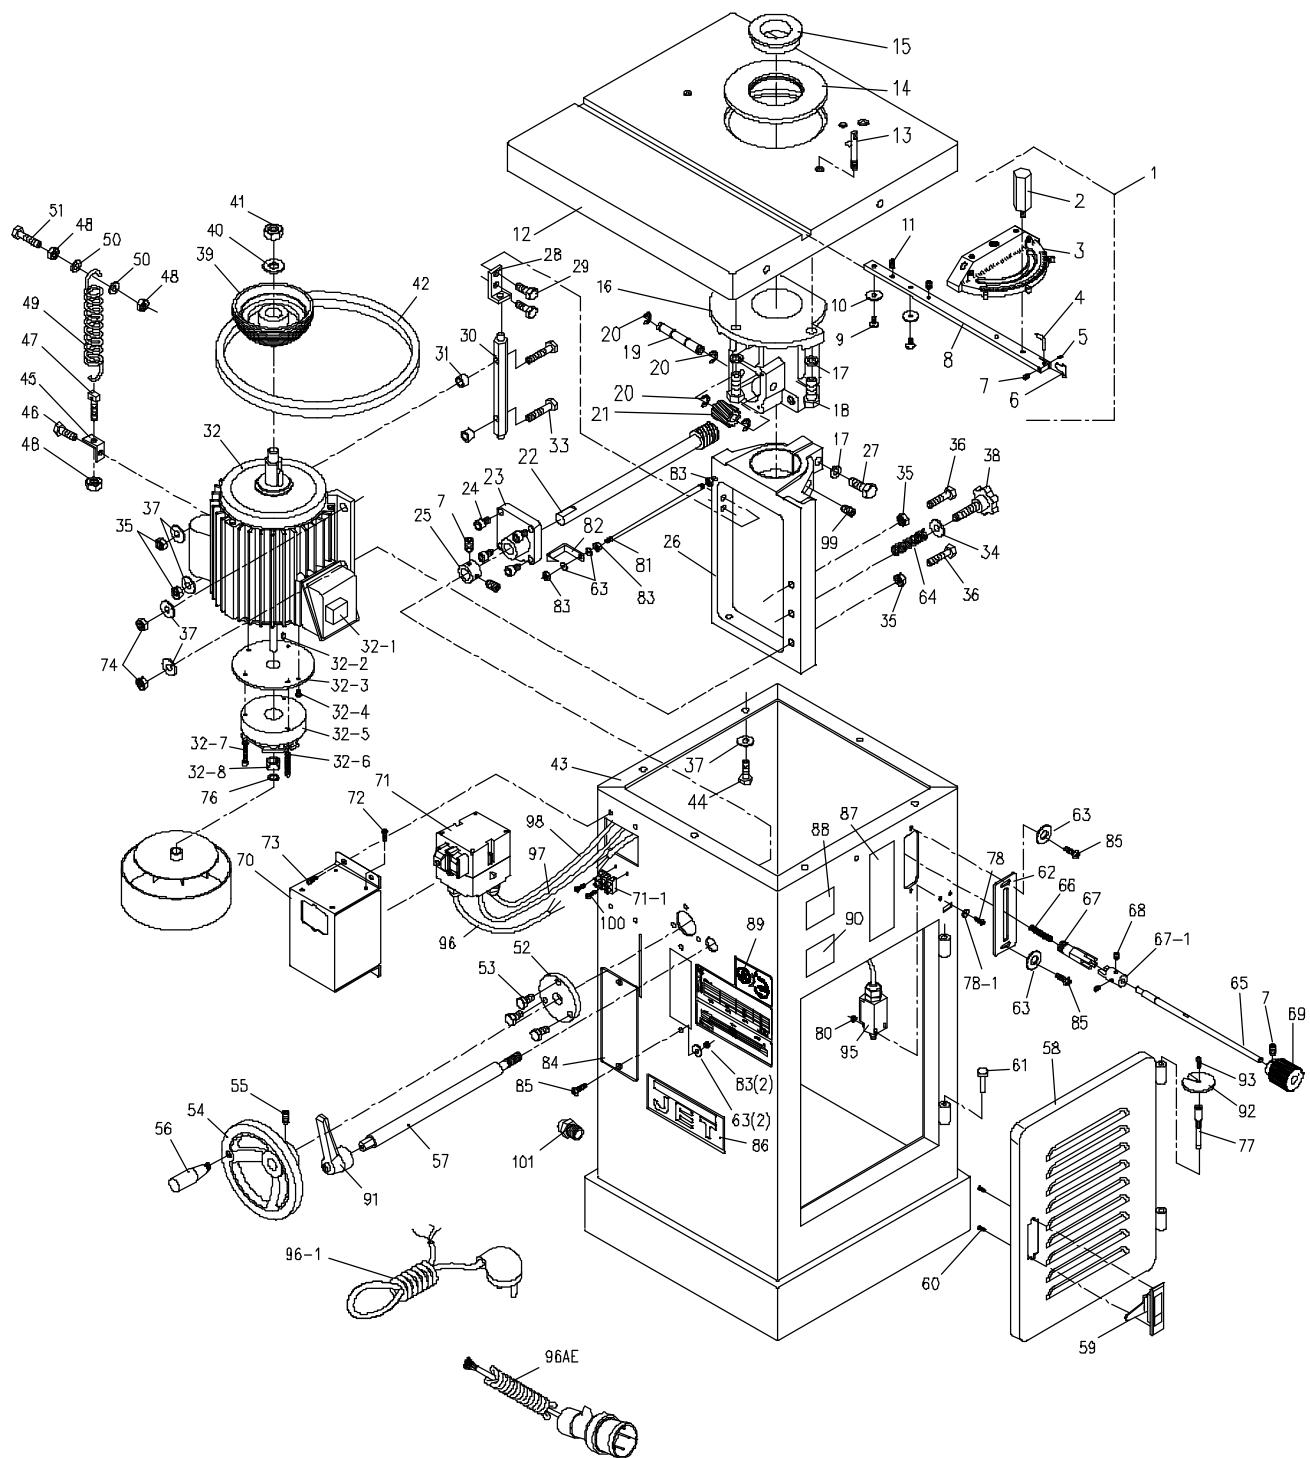

Base Assembly Parts List


Index	Part No.	Description	Size	Qty.
01.....	JWS34-001MGE.....	Miter Gauge Assy(Includes#58-#68).....		1
02.....	JWS34-077.....	Handle		1
03.....	JWS34-078.....	Miter Gauge Body		1
04.....	JWS34-080.....	Pointer	M10x1.5Px25L.....	1
05.....	JWS34-081.....	Roll Pin		1
06.....	JWS34-006.....	Stop Plate		1
07.....	JWS34-102.....	Set Screw	1/4-20UNCx1/4	4
08.....	JWS34-008E.....	Guide Bar.....		1
09.....	JWS34-009E.....	Flat Head Screw.....	1/4-20UNCx1/4	2
10.....	JWS34-010E.....	Special Washer		2
11.....	JWS34-011E.....	Set Screw	5/16-20UNCx5/16	2
12.....	JWS34-012E.....	Working Table.....		1
13.....	JWS34-085.....	Starting Pin		1
14.....	JWS34-14TIE.....	Table Insert.....	175(OD),110(ID).....	1
15.....	JWS34-15TIE.....	Table Insert.....	118(OD),65(ID)	1
16.....	JWS34-16SHE.....	Spindle Houshing		1
17.....	JWS34-112.....	Lock Washer	13.3x21x2.6	4
18.....	JWS34-106.....	Hex Head Bolt.....	1/2-12NCx1-1/2.....	3
19.....	JWS34-095.....	Shaft		1
20.....	JWS34-096.....	E-Ring.....	ETW-10.....	4
21.....	JWS34-097.....	Helical Gear		1
22.....	JWS34-098.....	Worm		1
23.....	JWS34-099.....	Worm Gear Houshing.....		1
24.....	JWS34-100.....	Hex Socket Cap Screw.....	1/4-20NCx3/4.....	4
25.....	JWS34-101.....	Toggle.....		1
26.....	JWS34-108.....	Motor Bracket.....		1
27.....	JWS34-106.....	Hex Head Bolt.....	1/2-12NCx2.....	1
28.....	JWS34-132.....	Bracket		1
29.....	JWS34-133.....	Hex Head Bolt.....	3/8-16NCx3/4.....	2
30.....	JWS34-138.....	Truss Rod		1
31.....	JWS34-139.....	Spacer Washer	3/8.....	2
32.....	JWS34-32NE.....	Motor	2HP, 1ph, 230V	1
32.....	JWS34-32NAE.....	Motor	3HP, 3ph, 400V	1
.....	JWS34-RCE.....	Running Capacitor(not show)	40• f,500V	1
.....	JWS34-CCE.....	Capacitor Cover		1
.....	JWS34-FAN.....	Fan		1
.....	JWS34-MFC.....	Motor Fan Cover		1
32-1	JWS34-RE.....	Rectifer		1
32-2	JWS34-KE.....	Key	4 x 4 10L	1
32-3	JWS34-PE.....	Plate		1
32-4	TS-2246122.....	Socket Button Screw	M6 x 1/2	2
32-5	JWS34-BME.....	Brake Magnet.....	2HP, 1ph, 230V	1
.....	JWS34-BMAE.....	Brake Magnet.....	3HP, 3ph, 400V	1
32-6	TS-2361051.....	Lock Washer	M5.....	3
32-7	TS-2205301.....	Hex Cap Screw	M5x0.8px30	3
32-8	JWS34-BE.....	Block		1
33.....	JWS34-111.....	Hex Head Bolt.....	3/8-16NCx2.....	2
34.....	JWS34-134NE.....	Flat Washer	10x20x2	1
35.....	JWS34-140.....	Hex Nut.....	3/8-16NC	4
36.....	JWS34-110.....	Hex Head Bolt.....	3/8-16NCx2-1/2.....	2
37.....	JWS34-135.....	Flat Washer	3/8x23x2	10
38.....	JWS34-109.....	Knob	3/8-16NCx2-1/2.....	1

Index	Part		Description	Size	Qty.
No.	No.				
39.....	JWS34-121E		Motor Pulley4 Speed	1
40.....	JWS34-119.....		Flat Washer16x33x3.....	1
41.....	JWS34-118.....		Hex Nut.....	.5/8-18UNF	1
42.....	JWS34-042E		Poly V-Belt230J	1
43.....	JWS34-043E		Base		1
44.....	JWS34-093.....		Hex Head Bolt.....	.3/8-16NCx1.....	6
45.....	JWS34-130.....		Bracket		1
46.....	JWS34-129.....		Hex Head Bolt.....	.5/16-18NCx1/2.....	1
47.....	JWS34-128.....		Special Screw5/16-18NCx1-1/2.....	1
48.....	JWS34-126.....		Hex Nut.....	.5/16x18NC	3
49.....	JWS34-127.....		Spring		1
50.....	JWS34-124.....		Flat Washer5/16x23x2.....	2
51.....	JWS34-123.....		Hex Head Bolt.....	.5/16-18NCx3.....	1
52.....	JWS34-178.....		Flange		1
53.....	JWS34-177.....		Hex Head Bolt.....	.5/16-18NCx3/4.....	3
54.....	JWS34-54E		Hand Wheel		1
55.....	TS-0270051		Set Screw5/16-18NCx1/2.....	2
56.....	JWS34-163.....		Handle3/8-16NC	1
57.....	JWS34-161.....		Handle Clamping3/4-16NF	1
58.....	JWS34-58.....		Safety Door		1
59.....	JWS34-59E		Handle Locking Plate		1
60.....	JWS34-60E		Round Head ScrewM3.....	2
61.....	JWS34-158.....		Door Bolt		1
62.....	JWS34-151.....		Plate		1
63.....	JWS34-63E		Flat Washer1/4x13x0.8.....	6
64.....	JWS34-164NE		Spring		1
65.....	JWS34-143.....		Locking Rod		1
66.....	JWS34-144.....		Spring		1
67.....	JWS34-145.....		Connector		1
67-1	JWS34-145A		Lock Mandrel		1
68.....	TS-1522041		Set ScrewM5x1.2L	2
69.....	JWS34-69E		Knob		1
70.....	JWS34-70E		Control Cover Assy		1
71.....	JWS34-107NE		Switch Kedu, complete switchbox230/50/1	1
	JWS34-107NAE.....		Switch Kedu , complete switchbox400/50/3	1
71-1	JWS34-CB.....		Connector Bracket230/50/1 Only	1
72.....	TS-081C062		Machine Screw#10-24 x1/2	4
73.....	JWS34-73E		Round Head Screw5/16-18NCx3/8L	4
74.....	JWS34-74E		Nylon Nut3/8x16UNC	2
76.....	JWS34-76E		C-RingSTW-14.....	1
77.....	JWS34-77E		Special Door Bolt		1
78.....	JWS34-78E		Round Head ScrewM4x0.7Px30L	2
78-1	TS-1550031		Flat WasherM5.....	2
79.....	JWS34-79S		Stripe (not shown)		1
80.....	JWS34-80E		Hex NutM4x0.7P	2
81.....	JWS34-81E		Pointer Leader		1
82.....	JWS34-82E		Pointer		1
83.....	TS-0561011		Hex Nut1/4-20NC	5
84.....	JWS34-84E		See Thru Plate		1
85.....	JWS34-85E		Round Head Screw1/4-20NCx5/8L	2
86.....	JWS34-184.....		JET Label		1
87.....	JWS34-185.....		Label		1
88.....	JWS34-88E		I.D Label		1
89.....	JWS34-89NE		Instruction Label4 Speed	1
90.....	JWS34-90E		Motor Label		1
91.....	JWS34-91E		Handle		1

Index	Part			
No.	No.	Description	Size	Qty.
92.....	JWS34-92E	Limit Switch Plate.....		1
93.....	JWS34-93E	Special Door Bolt		1
95.....	JWS34-95E	Limit Switch.....		1
96.....	JWS34-96E	Power Cord (Switch to connector) (Short).....H05VVF3Gx1.0 m •	1	1
96-1	JWS34-96-1E	Power Cord (w/Plug to connector)	H05VVF3Gx1.0 m •	1
.....	JWS34-96AE	Power Cord (w/Plug to switch).....H05VVF4Gx1.5 m •	1	1
97.....	JWS34-97E	Switch Cord (Switch to limited switch).....		1
98.....	JWS34-98E	Motor Cord (Motor to switch)	1ph, 230V.....	1
.....	JWS34-98AE	Motor Cord (Motor to switch)	3ph, 400V.....	1
99.....	TS-0270091	Socket Set Screw.....	5/16 x 1	1
100.....	TS-2244162	Button Screw.....	M4x0.7px15	2
101.....	JWS34-100E	Strain Relief	PG13.5.....	1


Parts List and Assembly for the JWS-34LX Fence Guard

Index No.	Part No.	Description	Size	Qty.
.....	JWS-34LXFGA	Fence Guard Assembly		1
1	JWS-34LX 201	Bracket		1
2	JWS-34LX 202	Guide Bar ass'y		1
3	JWS-34LX 203	Guide Bar ass'y		1
4	JWS-34LX 204	Fence Plate ass'y		1
5	JWS-34LX 205	Knob from F3		1
6	JWS-34LX 206	Knob from F2		1
7	JWS-34LX 207	Knob from F1		1

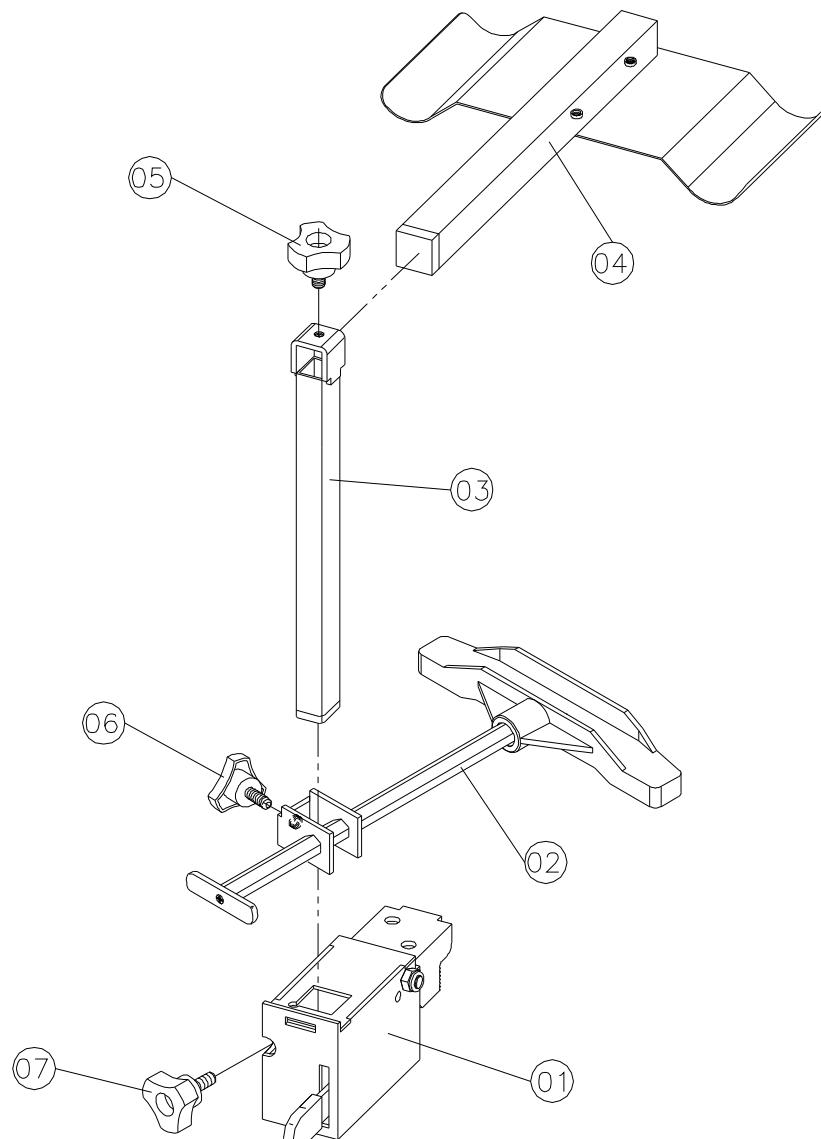


Parts List and Assembly for the JWS-34LX Curved Guard

Index	Part No.	Description	Size	Qty.
	JWS-34LXCGA	Curved Guard Assembly		1
1	JWS-34LX 301	Dust Bracket ass'y		1
2	JWS-34LX 302	Safety Shield Mount ass'y		1
3	JWS-34LX 303	See through Guard		1
4	JWS-34LX 304	Guide Plate ass'y		1

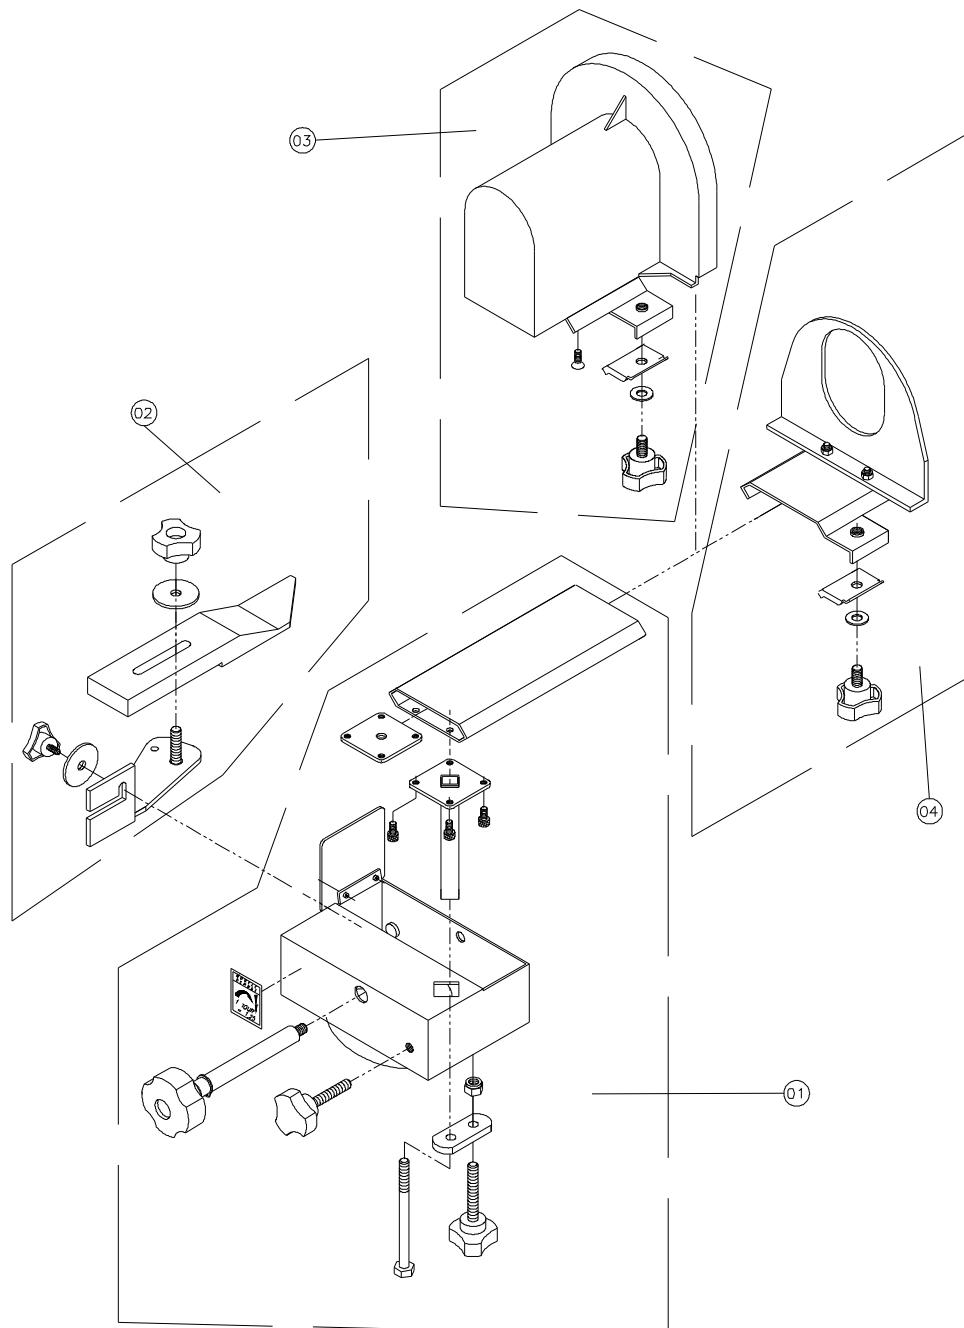

Parts for the JWS-34LX Sander Spindle (Optional)

Index No.	Part No.	Description	Size	Qty
1	10000252	Sander Spindle Assembly.....		1
1	JWS34LX-401	Abrasive Roll(100 grit).....	.4" x 230L.....	1
2	JWS34LX-402	Abrasive Roll(100 grit).....	.3" x 230L.....	1
3	JWS34LX-403	Abrasive Roll(100 grit).....	.2" x 230L.....	1
4	JWS34LX-404	Abrasive Roll(100 grit).....	.1-1/2" x 230L.....	1
5	JWS34LX-405	Abrasive Roll(100 grit).....	.1" x 230L.....	1
6	JWS34LX-406	Flat Washer.....	.25 x .19.1 x3t	2
7	JWS34LX-407	Flat Washer.....	.37.9	2
8	JWS34LX-408	Flat Washer.....	.48	2
9	JWS34LX-409	Flat Washer.....	.76	2
10	JWS34LX-410	Flat Washer.....	.100	2
11	JWS34LX-411	Rubber Wheel1" x 230L.....	1
12	JWS34LX-412	Rubber Wheel1-1/2" x 230L.....	1
13	JWS34LX-413	Rubber Wheel2" x 230L.....	1
14	JWS34LX-414	Rubber Wheel3" x 230L.....	1
15	JWS34LX-415	Rubber Wheel4" x 230L.....	1
16	JWS34LX-416	Sander Spindle.....	.3/4"-16UNF	1
17	JWS34LX-417	Nylon Nut3/4"-16UNF	1
18	JWS34-013E	Special Arbor Nut		1

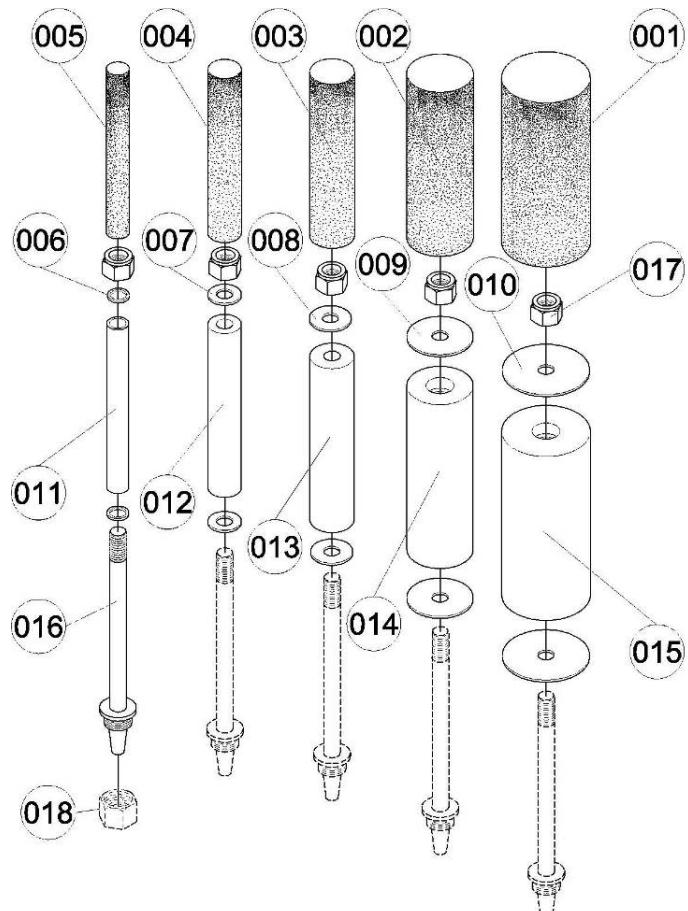


JWS-34KX
708502KXM

230/50/1

	colour of strands	Litzenfarben	couleur des cordons
BK	black	schwarz	noir
WH	white	weiß	blanc
BU	blue	blau	bleu
YE	yellow	gelb	jaune
RD	red	rot	rouge
BN	brown	braun	brun
GY	grey	grau	gris
GNYE	green-yellow	grün-gelb	vert-jaune
OG	orange	orange	orange
VT	violet	violett	violet

	meaning of symbol	Bedeutung der Zeichen	interprétation
M	motor	Motor	moteur
S	switch	Schalter	interrupteur
C	condenser	Kondensator	condensateur
R	rectifier	Gleichrichter	rectifier
BR	motor break	Motorbremse	frein de moteur
RS	reversing switch	Drehrichtungsschalter	commu. droite/gauche
CS	centrifugal switch	Fliehkraftschalter	déclencheur centrifuge
OL	overload cut-off	Überlastschutzschalter	déclencheur surcharge
LS	limit switch	Positionsschalter	micro

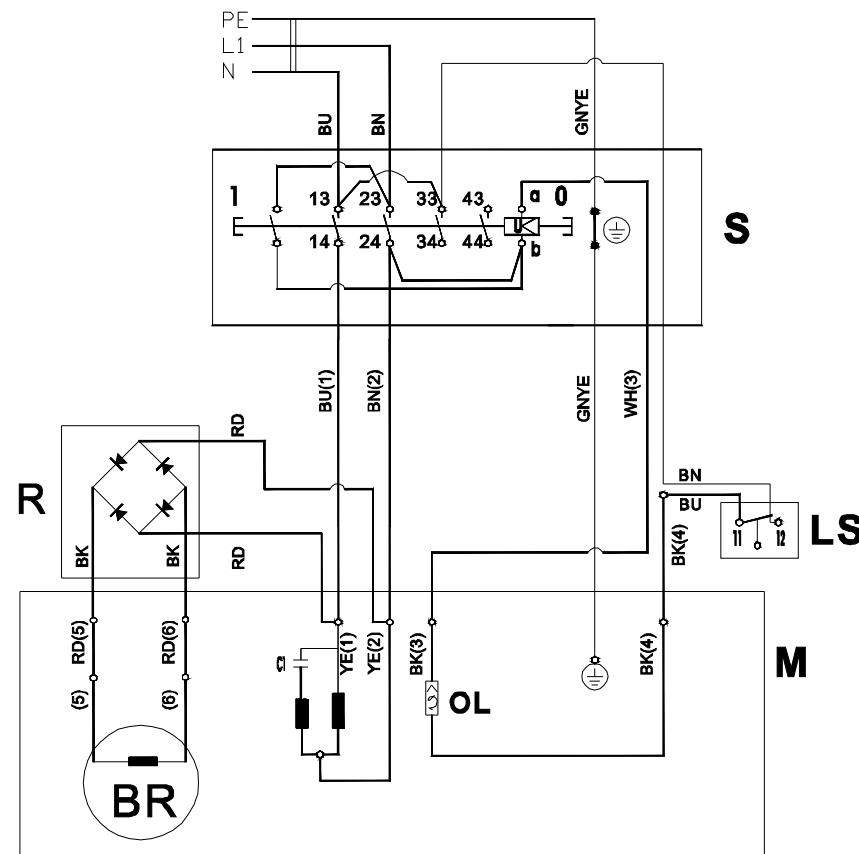

JWS-34KX
708502KXT

400/50/3

	colour of strands	Litzenfarben	couleur des cordons
BK	black	schwarz	noir
WH	white	weiß	blanc
BU	blue	blau	bleu
YE	yellow	gelb	jaune
RD	red	rot	rouge
BN	brown	braun	brun
GY	grey	grau	gris
GNYE	green-yellow	grün-gelb	vert-jaune
OG	orange	orange	orange
VT	violet	violett	violet

	meaning of symbol	Bedeutung der Zeichen	interprétation
M	motor	Motor	moteur
S	switch	Schalter	interrupteur
C	condenser	Kondensator	condensateur
R	rectifier	Gleichrichter	rectifier
BR	motor break	Motorbremse	frein de moteur
RS	reversing switch	Drehrichtungsschalter	commu. droite/gauche
CS	centrifugal switch	Fliehkraftschalter	déclencheur centrifuge
OL	overload cut-off	Überlastschutzschalter	déclencheur surcharge
LS	limit switch	Positionendschalter	micro

